

Brownie

STARMATIC

CAMERA

WITH KODAR LENS *f/8*



YOUR BROWNIE STARMATIC TAKES ALL 3

YOUR Brownie Starmatic Camera will take good clear pictures on cloudy or bright days—automatically. Operation is very simple. Wonderful pictures will be your reward if you understand your camera. Read these instructions carefully, and keep your camera handy; then practice each step as it appears in the manual.

- 1 Kodak Verichrome Pan Film—produces 3½ x 3½-inch standard enlarged black-and-white prints.
- 2 Kodacolor Film—produces 3½ x 3½-inch standard enlarged color prints.
- 3 Kodak Ektachrome Film for Daylight for daylight pictures and “Type F” for flash pictures—produce super slides 2 x 2 inches, picture size 1½ x 1½ inches.

See your photo dealer for processing, prints, and enlargements.



1 for 12 black-and-white snapshots



2 for 12 color snapshots



3 for 12 color slides

uses
Kodak
127
films

T.M. REG.
U.S. PAT. OFF.



HARRY W. HENNINGS
4318 ROOSEVELT AVE
RICHMOND, CALIF. 94705
TE. 4-2715

LOAD

*always in
subdued light*

NOTE: If you are practicing with an empty camera and find the red shutter release cannot be pressed down, turn the wind knob on the bottom of the camera.

- 1 Push the LEVER on the bottom of the camera to open; then withdraw the FILM HOLDER from the camera as illustrated.
- 2 The empty spool should be over the WIND KNOB. If the end of the 4 spool does not engage the wind knob, turn the wind knob.

- 3 Place the end of the full film spool between the fork of the SPRING pointed out by the word LOAD on the film holder. Push up against the spring; then swing the other end of the spool in and let it snap into the HOLE.

- 4 Break the film seal; then draw the paper, colored side out, over the large opening in the film holder marked FILM THIS SIDE. Thread the end of the paper evenly into the slot of the empty spool. Turn the wind knob two full turns and at the same time apply slight pressure on the paper to be certain it is wound on the spool straight and tight.

5



